



# AESCULAP<sup>®</sup> STERILE CONTAINER FUNCTIONAL TEST


## PRIME<sup>®</sup> PRO STERILE CONTAINER

Check all components of the sterile container visually for damage and correct function before every use. To ensure a safe use, instructions for use TA015110-EN must be followed under all circumstances. If the most recent edition of the instructions for use is not available to you, please contact Aesculap.

### 1. METAL PARTS NOT DEFORMED



\ Check container bottom and lid

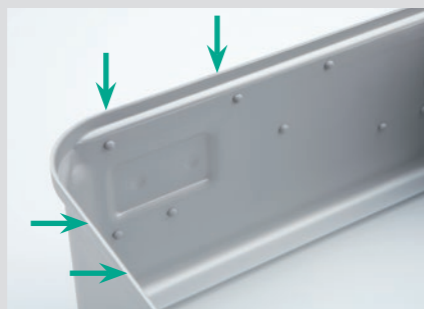


\ No dents in rim of the container bottom



\ No dents in rim of the container lid  
\ Aluminium lid not warped

### 2. INTACTNESS OF GASKETS

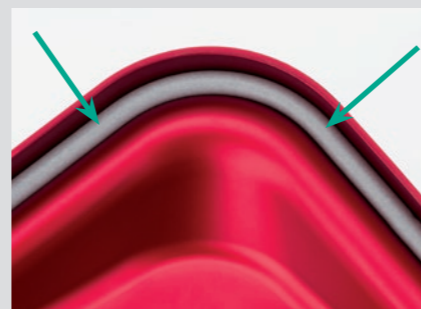

\ Gaskets are present and intact  
\ No cracks, fractures etc.




\ Remove cover for inspection (remove anticlockwise, replace clockwise)



\ Primeline Filters undamaged (no kinks, holes, cracks or crevices)  
\ Leave filter in cartridge during inspection

### 4. LOCKING MECHANISM FULLY FUNCTIONAL

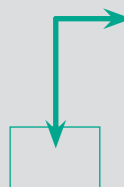

\ Ensure that the triangles are aligned together (locked position)

\ The locking mechanism must be fully functional and show no damage  
\ Lubricate the locking mechanism hinges with SteriLub 600 from time to time

### 5. CORRECT CLOSURE OF LID



\ Locking mechanism of lid snaps audibly into place on the bottom counterpart

### 6. CARRYING HANDLES UNDAMAGED

\ Carrying handles are intact and show no visible damage

### 7. UNDAMAGED STERILE CONTAINER LABELLING AND SEALING

- \ Only use undamaged sterile containers
- \ Sterile container closed
- \ If components are damaged, replace with original spare parts or repair immediately (Aesculap Technical Service)
- \ Either sealed with production label, or production label and plastic lock attached